
EN | Firmware update for the LAMAX X3.1 camera

IMPORTANT:

1. Camera must be charging the whole time
2. Filename must not be changed

STEP 1: COPY FILES TO A MICROSD CARD

- SD card must be formatted
- File must be copied directly to the card (not to a folder)

STEP 2: INSERT THE CARD INTO THE CAMERA

- Camera must be turned off when inserting the SD card

STEP 3: UPDATING FW

- Turn on the camera (hold down the front button)
- Enter the menu (using the front button, press 4X) and confirm by pressing the "Shutter"
- Navigate to the 4th tab (the cog) using the front button
- Go to Firmware (side button "Down") and confirm with "Shutter"
- Press the "Up/WiFi" side button and confirm with "Shutter"
- Firmware will start updating

STEP 4: FINISHING THE UPDATE

- When the update is complete, the camera automatically restarts
- Camera must be turned off before removing the card!